

135105





Read the instruction manual before using and keep them available at all times!

ENGLISH Translation of the original instruction manual

1. General information	
1.1 Information about the instruction manual	14
1.2 Key to symbols	14
1.3 Liability and Warrantees	15
1.4 Copyright protection	
1.5 Declaration of conformity	15
2.Safety	16
2.1 General information	16
2.2 Safety instructions for use of the device	
2.3 Intended use	
3. Transport, packaging and storage	19
3.1 Delivery check	
3.2 Packaging	
3.3 Storage	
· ·	
4. Technical data	
4.1 Technical specification4.2 Overview of parts	
'	
5. Installation and operation	
5.1 Safety instructions	
5.2 Installation and connection	
5.3 Operation	21
6. Cleaning and maintenance	23
6.1 Safety advice	
6.2 Cleaning	
6.3 Safety instructions for maintenance	
7. Waste disposal	2/
7. 1143to 413posai	

Bartscher GmbH Franz-Kleine-Str. 28 D-33154 Salzkotten Germany

phone: +49 (0) 5258 971-0

+49 (0) 5258 971-120

fax:



1. General information

1.1 Information about the instruction manual

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards, which could lead to injury.
Please follow the instructions very carefully and proceed with particular attention in these cases.



WARNING! Electrical hazard!

This symbol draws attention to potential electrical hazards. If you do not follow the safety instructions, you may risk injury or death.



CAUTION!

This symbol highlights instructions, which should be followed to avoid any risk of damage, malfunctioning and/or breakdown of the device.



This symbol highlights tips and information, which have to be followed for an efficient and trouble-free operation of the device.



1.3 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology. If you have any questions, you should contact the manufacturer.



Read the instruction manual carefully before using the device. The manufacturer does not accept liability for any damage or malfunction resulting from not following the instructions for use.

The instruction manual should be kept near the device, easily accessible for anyone wishing to work with or using it. We reserve the right to make technical changes for purposes of developing and improving the useful properties.

1.4 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

1.5 Declaration of conformity

The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity.

If required we will be glad to send you the according declaration of conformity.



2.Safety

This section provides an overview of all important safety aspects.

In addition every chapter provides precise safety advice for the prevention of dangers which are highlighted by the use of the above mentioned symbols.

Furthermore, attention should be paid to all pictograms, markers and labels on the device, which must be kept in a permanent state of legibility.

By following all the important safety advice you gain an optimal protection against all hazards as well as the assurance of a safe and trouble-free operation.

2.1 General information

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

Knowing the contents of the instruction manual as well as avoiding mistakes and thus operating this device safely and in a fault-free manner is very essential to protect yourselves from the hazards.

To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.

This device may only be operated in technically proper and safe condition.

2.2 Safety instructions for use of the device

The specifications regarding the industrial safety are based on the Regulations of the European Union applicable at the time of manufacturing the device.

If the device is used commercially, the user is obliged to ensure that the said industrial safety measures concur with the state of the rules and regulations applicable at the time in question for the entire period of use of the device and to comply with the new specifications.

Outside the European Union, the industrial safety laws applicable at the place of installation of the device and the regional territorial provisions must be complied with.

Besides the industrial safety instructions in the instruction manual, the general safety and accident prevention regulations as well as environment protection regulations applicable for area of application of the device must be followed and complied with.



CAUTION!

 The device can be used by children 8 years and up, as well as by people with disabilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on proper use of the device and its possible dangers.



- o **Children** should not play with the device.
- Cleaning and maintenance cannot be performed by children younger than 8 years old and must be done under supervision.
- Children under the age of 8 years old must be kept away from the device and its power cord.
- Please keep these instructions and give them to future owners of the device.
- All people using the device should follow the instructions and tips contained in these instructions.
- Only use the device indoors.

2.3 Intended use

Safe operation is only guaranteed when using the device for its intended purpose.

Any technical interventions, as well as assembly and maintenance are to be made by a qualified customer service only.

The device is intended for home use or in similar places such as:

- in kitchens for store or office employees or in other service locations;
- in suburban properties;
- by guests of hotels, motels and other places of accommodation;
- in Bed & Breakfasts.

The bar mixer is intended <u>only</u> for preparing cocktails, milkshakes, smoothies, sauces and puree.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.



3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.
 If required refresh or renew.




4. Technical data


4.1 Technical specification

Name	Bar mixer
Article no.:	135105
Construction:	casing – lacqured sheet steel, shaker, mixing tip and shield – stainless steel
Speeds:	2
Power:	400 W / 220-240 V 50 Hz
Dimensions:	W 160 x D 205 x H 500 mm
Shaker:	capacity: 950 ml; max. filling volume 650 ml
Weight:	6.22 kg

We reserve the right to make technical changes!

4.2 Overview of parts

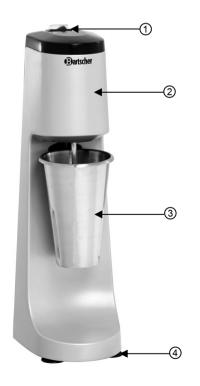

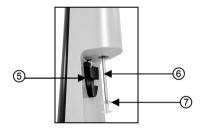

- ① 2-speed switch
 - O OFF
 - I slow
 - II fast
- ② Casing
- Shaker with maximum filling volume of 650 ml
- 4 Suction cups
- (5) Shaker clamp
- **6** Mixing and foaming rod
- (7) Mixing shields



5. Installation and operation

5.1 Safety instructions



WARNING! Risk of electric shock!

The device must only be connected to a properly installed single socket with protective contact.

Never remove the power cable by pulling the cable itself; always grab the plug housing.

- Never allow the power cable to come into contact with heat sources or sharp edges.
 The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled.
- Never place the device or other objects on the power cable.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep away the cable from operating range and do not dunk it into water.
- Do not use the device in case it does not function properly, has been damaged or dropped.
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- Do not move or tilt the device when in operation.



WARNING! Hazard via electrical current!

The device can cause injuries due to improper installation!

Before installation the local power grid specification should be compared with that of the device (see type label).

Connect the device only in case of compliance!

Take note of the security advice!



5.2 Installation and connection

- Discard the complete packing material after unpacking the device.
- Place the device on top of an even and safe surface which supports the weight of the device and is dry.
- Not at any time should you place the device on an inflammable surface.
- You must not position the device near open fireplaces, electric ovens/arc furnaces, furnaces/electric heaters or other heat sources.
- The electrical circuit in the socket must be secured to at least 16A. Only connect the
 device directly to the wall socket; do not use any extension cords or power strips.
- Place the device so that the plug is easily accessible and can be quickly removed from its socket in case of necessity.

5.3 Operation

Disinfection and cleaning before use

- Clean and disinfect thoroughly all parts of the device that come into contact with food (blender jar, mixing rod, mixing disks) before first use. Fill the jar to about 3/4 of its capacity with a solution of commercially available disinfectant and water (ratio: 1 tablespoon (15 ml) of disinfectant for 3.8 liters of clean, cold (ca. 16 ℃) water).
- Put the blender jar in the device and let the device run at speed "I" (slow) for about 1 minute. Then switch off the device. Follow the instructions contained in the "Start-up" section.
- Remove the jar from the device and empty it. Rinse the blender jar with fresh water.
- In order to remove the moisture from the mixing rod and mixing disks, attach the empty blender jar to the holder and let the device run at speed "I" (slow) for about 30 seconds. Do not rinse the blender jar after disinfection.
- Clean the housing of the device with a soft, damp cloth.

Start-up

- Insert the unit's plug to a single grounded outlet.
- Ensure the switch is located in the "O" position.
- Fill the shaker with the desired ingredients.



CAUTION!

While filling the shaker, ensure that the maximum filling volume is not exceeded (higher mark, approx. 650 ml).

The shaker must not be underfilled, as the mixing tip may not reach the ingredients. Ensure that the ingredients in the shaker reach the minimum filling volume mark (approx. 200 ml!)

Bartscher

 Attach the shaker to the unit. Ensure that the upper edge is properly attached to the shaker clamp, as this is the only way to ensure contact between the shaker and micro switch.





 If the mixing tip is properly attached to the shaker clamp, the bar mixer can be turned on by using the switch. First, turn the switch to speed "I" (slow), then to speed "II" (fast).



WARNING! Danger of injury!

Never insert hands, spoons or any other objects into the shaker when the unit is turned on!

Failure to follow these instructions may lead to serious injuries and cuts caused by the mixing tip, as well as damage to the unit.

- Mix the ingredients until the desired consistency is reached (1-2 minutes).
- If the beverage is mixed properly, turn the switch to the position marked "O" (OFF) and remove the shaker, lifting it slightly up by the handle.
- Pour the beverage out from the shaker and serve.
- Remove the plug from its socket if the unit is not to be used any longer.

Tips and advice

- Most beverages can be prepared in less than two minutes.
- When preparing fruit cocktails never use whole fruits but rather chopped fruit or pulp.
- The shaker must always be filled to the minimum filling volume mark, so that the
 mixing tip can properly mix the beverage.
- When preparing drinks of a thinner consistency, do not exceed the maximum filling volume mark to avoid spilling of the beverage while mixing.
- For best results, use chilled ingredients. Milk cocktails are best if prepared using cold milk. The colder the milk, the thicker and foamier the beverage will be as a result.
- Syrups and powders should be added directly prior to mixing so that they do not sink to the bottom of the shaker.



- Fill the shaker first with liquids, then solid ingredients.
- Begin mixing at speed "I" (slow), before changing to speed "II" (fast).
- The bar mixer <u>is not</u> intended for grinding ice. When making drinks, use crushed ice
 when ice is necessary.

6. Cleaning and maintenance

6.1 Safety advice

- Before beginning with repair or cleaning works make sure the device has been disconnected from power supply and has cooled down.
- o Do not use any acid agents and make sure no water ingresses the device.
- To protect yourself from electric shock, never immerse the device, its cables and the plug in water or other liquids.



The device is not suited for direct washing via water jets.

Therefore, you must not use any kind of pressure water jet for cleaning the device!

6.2 Cleaning

- o Clean the unit regularly.
- o To wash the mixing tip, attach the shaker filled with warm water and washing-up liquid (approx. 250 ml) to the unit, then turn on at speed "I" (slow) for 30 seconds. Turn the switch to "O" (OFF) and pour out the water. Repeat the process with only warm water to rinse the mixing tip. Use a soft, dry cloth to wipe the mixing tip.
- o Rinse the shaker with warm water, then dry.
- The shaker and mixing shields are dishwasher-proof. To wash them in a dishwasher, remove the shields from the mixing tip (turn them counterclockwise).



The mixing cup and mixing shields are dishwasher-safe!

- Wipe the unit's casing with a soft, moist cloth then dry thoroughly.
- Use only soft cloths, never use sharp objects that may scratch the unit's surface.
- o After washing, use a soft, dry cloth to dry and polish the unit.



6.3 Safety instructions for maintenance

- Inspect the power cable regularly for damage. Never use the device if the cable is damaged. If the power cable is damaged, have an authorised service center or qualified electrician replace it.
- In case of damage or malfunction, please contact your stockist or our customer service centre.
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. Do not attempt to repair the device yourself.

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.





For the disposal of the device please consider and act according to the national and local rules and regulations.

fax:

phone: +49 (0) 5258 971-0

+49 (0) 5258 971-120

Bartscher GmbH Franz-Kleine-Str. 28 D-33154 Salzkotten Germany